

Pin assignment

Pin assignment number: 2093

Index: A

13.01.2021

Connector name: 26-pol CONTACT

Pin-count: 26

Page: 1/1

Pin	Designation	Description	Colour
1	SSI_Clock-_IN	Clock input -	-
2	SSI_Clock+_IN	Clock input +	-
3	SSI_DATA+_OUT	Data output +	-
4	SSI_DATA-_OUT	Data output -	-
5	Ser.Program+_IN/OUT	Ser. programming interface RS485	-
6	Ser.Program-_IN/OUT	Ser. programming interface RS485	-
7	CH_A_OUT	Channel A	-
8	Direction IN	Change of counting direction	-
9	Preset1_IN	Preset value 1	-
10	Preset2_IN	Preset value 2	-
11	/CH_A_OUT	Channel A inverted	-
12	CH_B_OUT	Channel B	-
13	/CH_B_OUT	Channel B inverted	-
14	Softendswitch_OUT1		-
15	Softendswitch_OUT2		-
16	Softendswitch_OUT3		-
17	Softendswitch_OUT4		-
18	not connected		-
19	Fault_OUT	Encoder error	-
20	Up_Down_OUT	Direction indicator	-
21	/Up_Down_OUT	Direction indicator inverted	-
22	Overspeed_OUT	Overspeed	-
23	not connected		-
24	Supply Voltage IN	Supply voltage	-
25	Ground IN	Ground	-
26	not connected		-

WARNING

'De-energize the system before carrying out wiring work or opening and closing electrical connections !

Short-circuits, voltage peaks, etc. can cause operating failures and uncontrolled operating states, as well as serious personal injuries and damage to property.

Verdrahtungsarbeiten, Öffnen und Schließen von elektrischen Verbindungen nur im spannungslosen Zustand durchführen ! Kurzschlüsse, Spannungsspitzen etc. können zur Fehlfunktion und unkontrollierten Zuständen der Anlage bzw. zu erheblichen Personen- und Sachschäden führen.