

Pin assignment

Pin assignment number: 9715

Index: + 3711 = K399

15.06.2011

Connector name: 12-pol.CONTACT Pin-count: 12

Page: 1/1

Pin	Designation	Description	Level	Driver	NC	Color
1	/CH_B_OUT	Channel B inverted	11-28V	Push Pull		white
2	Ser.Program+_IN/OUT	Ser. programming interface RS485	RS 485	RS 485		brown
3	CH_I_OUT	Channel Reference	11-28V	Push Pull		green
4	/CH_I_OUT	Channel Reference inverted	11-28V	Push Pull		yellow
5	CH_A_OUT	Channel A	11-28V	Push Pull		gray
6	/CH_A_OUT	Channel A inverted	11-28V	Push Pull		pink
7	Ser.Program-_IN/OUT	Ser. programming interface RS485	RS 485	RS 485		blue
8	CH_B_OUT	Channel B	11-28V	Push Pull		red
9	not connected					
10	Ground IN	Ground	0V			violet
11	not connected					
12	Supply Voltage IN	Supply voltage	11-28V			red/blue

Connector coding**'!!! Connector Y - coded !!!****WARNING !!**

,

'De-energize the system before carrying out wiring work or opening and closing electrical connections !!!

Short-circuits, voltage peaks, etc. can cause operating failures and uncontrolled operating states, as well as serious personal injuries and damage to property.

Verdrahtungsarbeiten, Öffnen und Schließen von elektrischen Verbindungen nur im spannungslosen Zustand durchführen !!! Kurzschlüsse, Spannungsspitzen etc. können zur Fehlfunktion und unkontrollierten Zuständen der Anlage bzw. zu erheblichen Personen- und Sachschäden führen.

,

Pin assignment

Pin assignment number: 3711

Index: + 9715 = K399

26.05.2011

Connector name: 12-pol.CONTACT Pin-count: 12

Page: 1/1

Pin	Designation	Description	Level	Driver	NC	Color
1	/CH_B_OUT	Channel B inverted	11-28V	Push Pull		white
2	Ser.Program+_IN/OUT	Ser. programming interface RS485	RS 485	RS 485		brown
3	CH_I_OUT	Channel Reference	11-28V	Push Pull		green
4	/CH_I_OUT	Channel Reference inverted	11-28V	Push Pull		yellow
5	CH_A_OUT	Channel A	11-28V	Push Pull		gray
6	/CH_A_OUT	Channel A inverted	11-28V	Push Pull		pink
7	Ser.Program-_IN/OUT	Ser. programming interface RS485	RS 485	RS 485		blue
8	CH_B_OUT	Channel B	11-28V	Push Pull		red
9	not connected					
10	Ground IN	Ground	0V			violet
11	not connected					
12	Supply Voltage IN	Supply voltage	11-28V			red/blue

WARNING !!

'De-energize the system before carrying out wiring work or opening and closing electrical connections !!!

Short-circuits, voltage peaks, etc. can cause operating failures and uncontrolled operating states, as well as serious personal injuries and damage to property.

Verdrahtungsarbeiten, Öffnen und Schließen von elektrischen Verbindungen nur im spannungslosen Zustand durchführen !!! Kurzschlüsse, Spannungsspitzen etc. können zur Fehlfunktion und unkontrollierten Zuständen der Anlage bzw. zu erheblichen Personen- und Sachschäden führen.